



Sub-woofer assembly

🔑 86.50.51

Remove

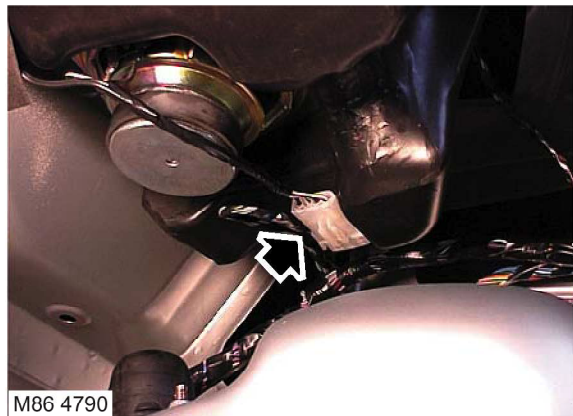

1. Disconnect multiplug from sub-woofer assembly.

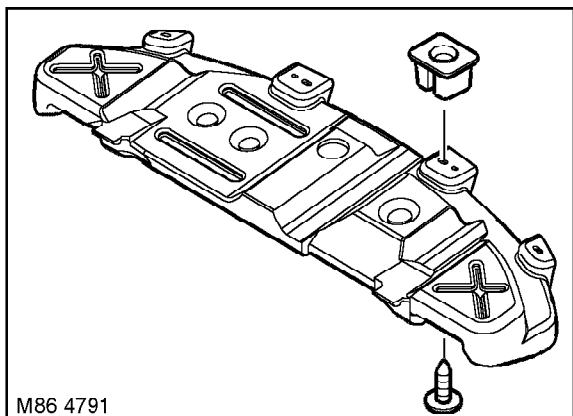

2. Remove 4 bolts securing sub-woofer assembly to body and remove sub-woofer.

Refit


1. Fit sub-woofer to body and fit bolts.
2. Connect multiplug to sub-woofer.

CD autochanger

🔑 86.50.60

Remove

1. Release catch and open glove box.
2. Remove fascia closing panel from passenger side.
👉 **INTERIOR TRIM COMPONENTS, REPAIRS, Panel - fascia closing - driver's.**

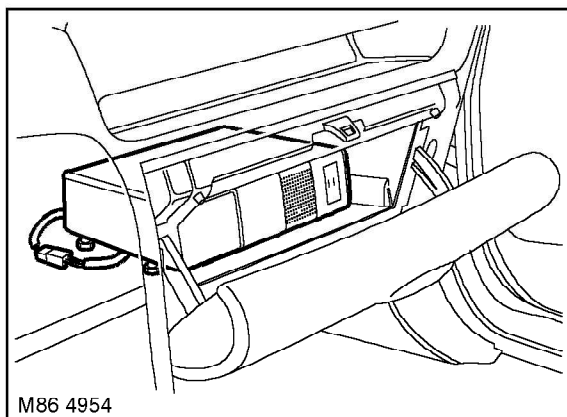

3. Disconnect multiplug from CD autochanger.
4. Release 4 nuts securing CD autochanger to glove box and remove autochanger.

Refit

1. Fit CD autochanger to glove box and secure with bolts.
2. Connect CD autochanger multiplug.
3. Fit fascia closing panel.
👉 **INTERIOR TRIM COMPONENTS, REPAIRS, Panel - fascia closing - driver's.**
4. Close glove box.




C.D. autochanger - Kenwood

🔑 86.50.60


Remove

1. Disconnect battery earth lead.
2. Release head unit from centre console using the appropriate special tools.
3. Release 2 turn buckles and lower passenger fascia closing panel.
4. Open glove box.


Refit

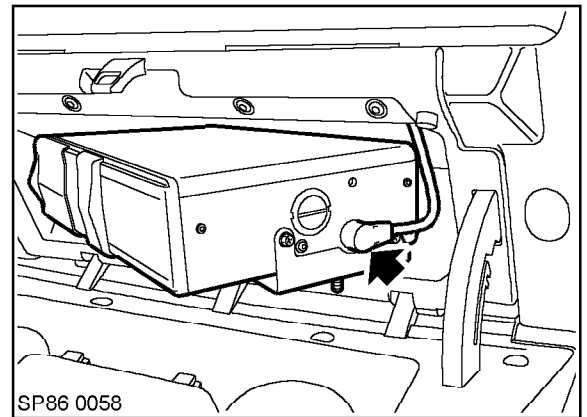


5. Connect multiplug to CD autochanger.
6. Position CD autochanger in glove box and locate bracket studs in fixing holes.

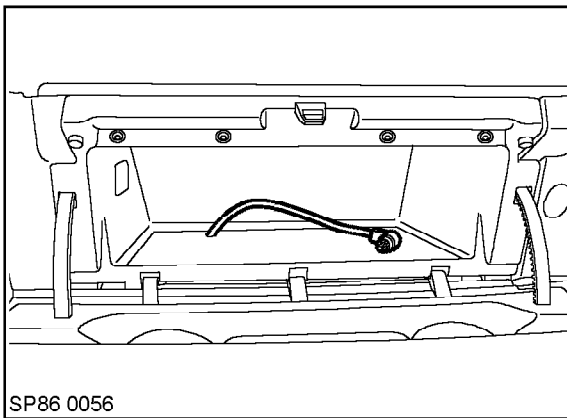


1. Feed CD autochanger data cable through hole in underside of glove box into glove box.
2. Feed opposite end of CD autochanger data cable behind centre console to audio unit aperture

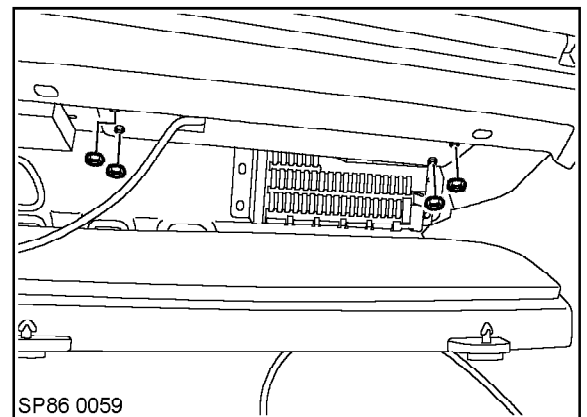

7. Fit and tighten nuts securing CD autochanger to glove box to 9 Nm.
8. Close glove box.
9. Position lower passenger fascia closing panel and secure with turn buckles.

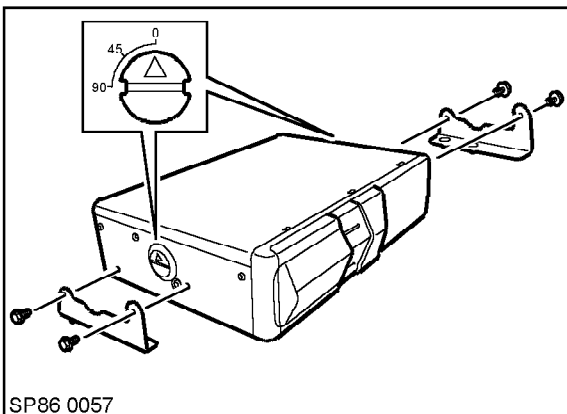

3. Ensure angle adjustment switches are in the correct position for the angle of installation.
4. Position mounting brackets to CD autochanger and secure with screws.

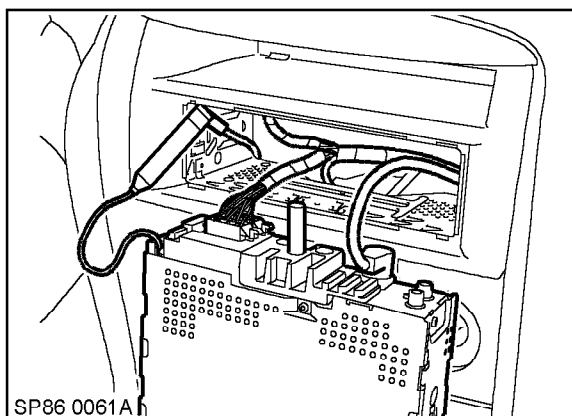


10. Connect CD autochanger data cable to head unit.
11. Slide audio unit into cage until retaining clips engage.
12. Connect battery earth lead.
13. Check CD autochanger for correct operation.

C.D. autochanger - additional location - renew

🔑 86.50.66

Remove

1. Open boot lid.

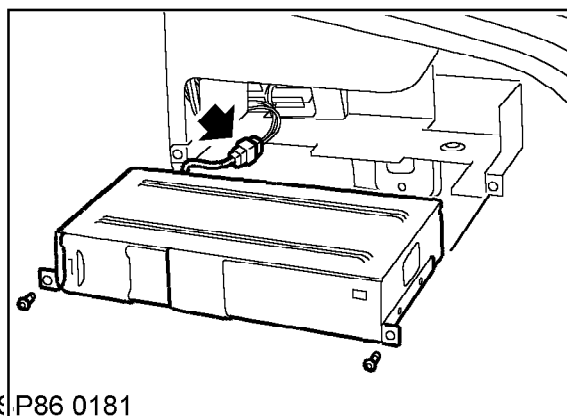

2. Remove 2 bolts securing CD autochanger to mounting bracket.
3. Release CD autochanger from mounting bracket, disconnect multiplug, remove CD autochanger.

Refit

1. Position CD autochanger, connect multiplug. Align CD autochanger to mounting bracket, fit and tighten bolts to 5 Nm.
2. Close boot lid.




Head unit - audio system - Kenwood

86.50.81


Remove

1. Disconnect battery earth lead.


Refit

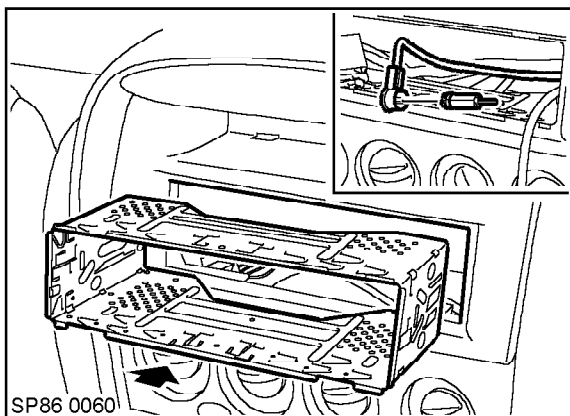

1. Position audio unit cage to centre console and secure with retaining tags.
2. Fit adapter to aerial lead.
3. Connect audio link harness to ICE multiplugs.

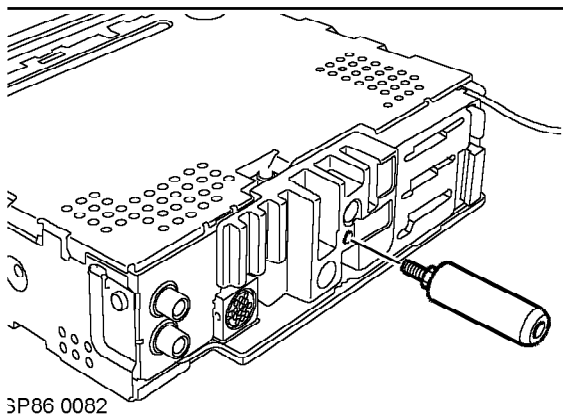

4. Fit and tighten rubber bung to rear of head unit.

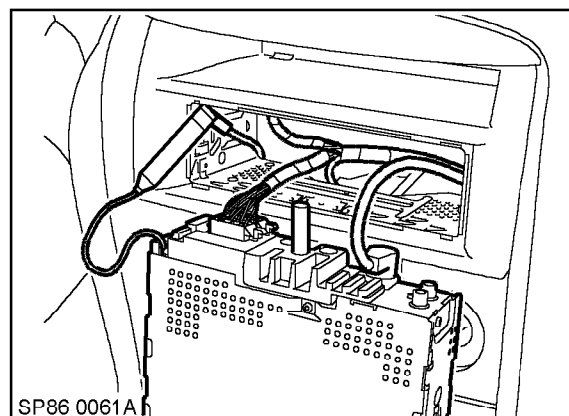

5. Position audio unit, connect aerial cable, CD autochanger data cable (if fitted) and multiplugs.
6. Slide audio unit into cage until retaining clips engage.
7. Connect battery earth lead.
8. Check audio unit for correct operation and program suitable radio stations on all pre-sets.